

2006 Scheduled Maintenance Intervals

Miles (in thousands)	5/25/45/65/85/105	15/55/95	35/75
Kilometres (in thousands)	8/40/70/100/130/160	25/85/145	55/115
Michigan Michigan Market Marke	0,-10,70,100,100,100	20/00/140	00,110
Engine Oil – change oil and replace filter	•	•	•
Wiper/Washer/Headlight Washer – check adjustment and function,	•	•	•
add fluid if necessary			
Tires and Spare – check for wear and damage, check pressure	•		
- check for wear and damage, check pressure and		•	•
Tires – rotate [B]	Bentle RNIL:		
renewal date of tire set (where applicable) Tires – rotate Service Reminder Display – reset Brake System – check for damage, leaks, pad thickness third level	• "Shers	•	•
Brake System – check for damage, leaks, pad thickness fluid level	• \(\frac{1}{1}\)	•	•
Wiper Arm Pivot Points – lubricate	, (Ó	Sente	•
Cooling System – check level, add if necessary		^c h _{1/6} .	•
Exhaust System – check for damage, leaks		100	•
Engine On Board Diagnostics – check faul memory		- O.	•
Engine Compartment – check for leaks		• Original Control of the Control of	•
Battery – check electrolyte level and add if necessary		• s.com	•
Dust and Pollen Filter – replace			•
Automatic Transmission and Final Deve – check for leaks		E E	•
Manual Transmission and Final Drive – check for leaks		e er	•
DSG (direct shift gearbox) – change il and replace filter element		entleyPut π only	A3, TT only
Haldex Clutch – change oil		T only	A3, TT only
- change filter		blis	TT only
Sunroof – clean guide rails and lugicate rails with grease spray		sh ers	•
Front and Rear Axle – check for excessive play, check dust seals on ball joints			•
and tie rod ends		• .com	
Lights – check all lights, check headlight adjustment		TT, A4 Cab. A8 only, 07	•
Drive Shaft Boots – check		<i>K</i>	•
Doors – lubricate doors, check straps 6		TT, A&Cab,	•
Spark Plugs – replace at 35,000 miles or 3, years, whichever occurs first.		***************************************	35K only: 1.8T, 3.0L, 3.2L VR6,
Then, every 40,000 miles or 2/years, whichever occurs first.			3.0L, 3.2L VR6, 6.0L
– replace at 55,000 miles or 6 years, whichever occurs first.		55K only: except 1.8T, 3.0L, 3.2L VR6, 6.0L	
Then, every 60,000 miles or 6 years, whichever occurs first.		3.0L, 3.2L VR6, 6.0L	
		\ <u>\</u>	75K only: 1.8T, 3.0L, 3.2L VR6, 6.0L only
Continuously Variable Transmission (multitronic) – charge ATF	moo.esaheilduqi(shinse i.e.	,	9.2E VIIO, 0.0E OIIIY
Power Steering Fluid – check, add if necessary	"and _{Valta}		•
Power Steering Fluid – check, add if necessary Air Cleaner – clean housing, replace filter element Ribbed V Belt – check condition	moo.exiaheiled	55K only: A3, A4, A6, A8 4.2L	TT, A8 6.0L only
Ribbed V Belt – check condition		AU, AO 4.2L	35K only: A8 6.0L
			75K only: A8 6.0L, 2.0TFSI, 3.0L, 3.2L
- replace			75K only: except 2.0TFSI, 3.0L, 3.2L, 6.0L
Snow Screen for Air Cleaner – clean		A4, A6 only	A4, A6 only
Underbody – check for damage and leaks		•	•
Road Test – check braking, kick-down, steering, electrical, heating and		•	•
ventilation systems, air conditioning, shift lock operation and power accessories			
Rear Lid Hinges – lubricate		A8 only	A8 only
Tiour Ela Timigoo Tabiroato			75K only: 1.8T, 3.0L, A8 4.2L

At 110K miles (175km) replace timing belt (2.0TFSI engine only). Check condition of timing belt tensioning system, dampening pulleys, and idler pulleys and replace if necessary (2.0TFSI engine only).

Brake Fluid – replace every 2 years regardless of mileage.

Cloth Top – check function and rollover protection every 2 years regardless of mileage (Audi A4 Cabriolet only).

Audi of America, Inc. believes the information and specifications to be correct at the time of printing. Specifications, maintenance intervals, standard features and options subject to change without notice.

Revised 10/27/2008